

### **Countertop Water Filter**


# **Clean Water** Machine

**Replacement Filter** Instructions


For use with AQ-CWM2-B and AQ-CWM2-B-Q



1. Unbox replacement filters and remove plastic. Remove filter housing lid. Twist filter chamber cap to the left and remove old filter from cap. Discard old filter.

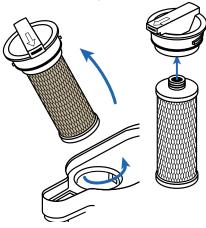


2. Press new filter into filter chamber cap ensuring a snug fit. Insert into housing unit and twist right to close.

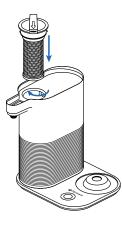

3. Fill water tank and place on dispenser dock.



4. Press dock button 3 times quickly. Light will illuminate red for 5 seconds.

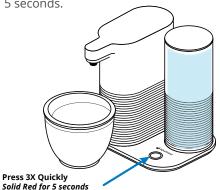

5. While red light is illuminated, press and hold dock button for 1 second. Light will blink red. While system flushes, light will continue to

 
blink red. Flush will take

about 60 seconds.

As flush completes, light will blink blue.

Press & Hold for 1 second

Blinks Red for 60 seconds





Blinks Blue for 5 seconds Solid Blue for 5 seconds

## water for life<sup>®</sup>

Protect your investment and save money with our Water for Life program.













AO-CWM2-R and AO-CWM2-R.O are certified by WQA to NSF/ANSI Standards 42, 53, and 401 when used in AQ-CWM2-B and AQ-CWM2-B-Q for the reduction of the claims specified on the Performance Data Sheet and at www.WQA.org.

#### NOTE: Do not use with water that is microbiologically unsafe or of unknown water quality without adequate disinfection before or after the system.

The recommended replacement frequency for The recommended replacement frequency for the AQ-CWN2-R and AQ-CWN2-R.Q is every 6 months or 300 gallons of use. Use only certified, genuine Aquesana replacement filters for continued contaminant removal and system performance.

### Aquasana, Inc.

6310 Midway Road Haltom City, Texas 76117 USA 866.662.6885 CAN 877.332.7873 www.aquasana.com

CONTACT US TO LEARN MORE waterforlife@aguasana.com

For the full list of contaminants filtered, scan to view the Performance Data Sheet on Aquasana.com.

Scan to view

replacement video