

# **aquasana**

## Protect your investment and save money with our Water for Life program.



Extended Warranty



Discounted Replacements



Shipping

8

No Contract

**CONTACT US TO LEARN MORE 866-275-2319** 

waterforlife@aquasana.com



The recommended replacement frequency for the AQ-SFRO-REMIN is every 6 months. Use only certified, genuine Aquasana replacement filters for continued contaminant removal and system performance.



For the full list of contaminants filtered, scan to view the Performance Data Sheet on Aquasana.com.



AQ-SFRO-REMIN

Under Sink Water Filter

SmartFlow® Reverse Osmosis

## **REPLACEMENT**

Remineralizer

Owner's Manual For use with AQ-SFRO and AQ-SFRO2


### Aquasana, Inc.

4343 S. Hamilton Road Groveport, OH 43125 866-662-6885 USA 877-332-7873 Canada www.aquasana.com

#### **INSTALLATION STEPS**

#### **Prepare for Installation**

1 Turn the inlet tee valve to the CLOSED position (1) and close the water tank valve (2). Release pressure from system by turning on dedicated faucet until water stops flowing. Once water stops flowing from the dedicated faucet, turn the faucet off.

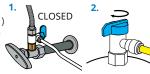


**WARNING:** Failure to release pressure can result in permanent system damage.

- **2 Unbox Remineralizer** replacement and remove plastic.
- Remove blue tubing from Remineralizer by pushing in the quick connect and pulling tubing out. Slide Remineralizer out of the bracket and discard entire cartridge.



#### **Reconnect Remineralizer**

- 4 Place new Remineralizer into the bracket with the label text facing upward.
- (5) Connect blue tubing from system manifold to the top port of the Remineralizer. Then, connect blue tubing from dedicated faucet to the bottom port of the Remineralizer.

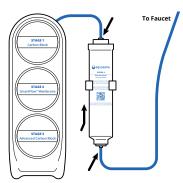

#### Flush and Check for Leaks

**NOTE:** Do not drink flushed water.

Open the inlet tee valve, open the water tank valve, and confirm dedicated faucet is off. While tank refills, carefully inspect for leaks.

NOTE: It will take 1-3 hours for the water tank to refill.

- After the water tank is full, turn on the dedicated faucet and empty the tank again.
- 8 Once the water tank is empty, turn off the dedicated faucet and allow tank to refill. Repeat this step two more times. Once you have emptied three tanks of water, close all faucets and refill for regular use.

**NOTICE – Safeguards:** If you are experiencing a tubing connection leak, shut off COLD water, disconnect and re-set the tube.

Do not use with water that is microbiologically unsafe or of unknown quality without adequate disinfection before or after the system.

